


# Diaphragm accumulator

1

## Design

The diaphragm accumulator consists of a welded pressure chamber on the oil side of which a connection tube is welded. The separation of the gas and the fluid is carried out by a diaphragm inserted in advance. There is a diaphragm button in the bottom of the diaphragm to prevent the diaphragm completely from destruction when the vessel is discharged. The diaphragm accumulator can be refilled by means of a gas filling screw or can be closed so that it is inseparable on the gas side. The fluid supply is available in different versions.

Replacement of the diaphragm is not possible!

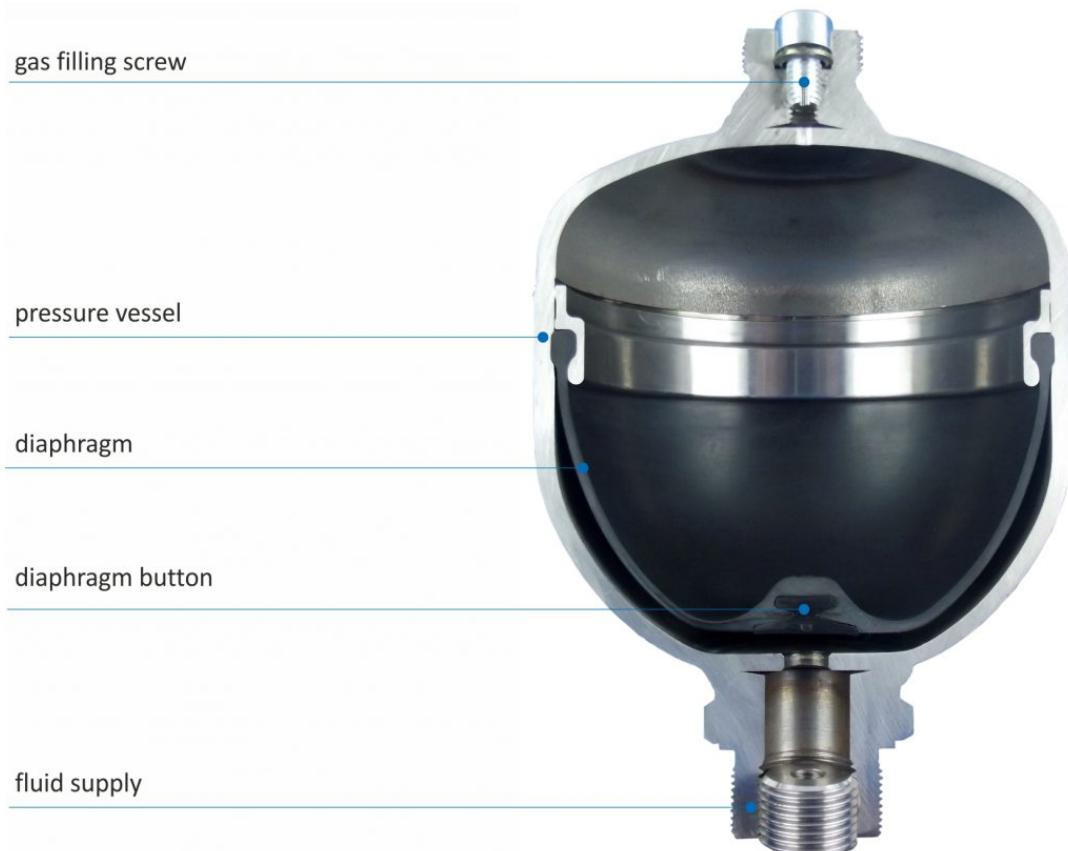

## Designation - Example of order

<b>MS</b>	<b>2,0</b>	<b>-</b>	<b>210</b>	<b>/</b>	<b>1</b>	<b>/</b>	<b>N</b>	<b>/</b>	<b>A2</b>	<b>/</b>	<b>040</b>	<b>/</b>	<b>T</b>	<b>/</b>	<b>CE</b>
1	2		3	4			5		6		7		8		9

1: Accumulator type

MS diaphragm accumulator

---

2: Nominal volume (Liter)

---

3: Max. permissible operating pressure

---

4: Design

1 gas can be refilled

2 gas cannot be refilled

---

5: Diaphragm material

N - NBR (zulässiger Temperaturbereich - 10°C bis + 80°C)

E - ECO (Hydrin) (zulässiger Temperaturbereich - 40°C bis + 80°C)

B - IIR (Butyl) (zulässiger Temperaturbereich - 15°C bis + 80°C)

V - FKM (Viton) (zulässiger Temperaturbereich - 20°C bis + 80°C)

---

6: Fluid supply

shape (see table)

---

7: Precharge pressure

p<sub>0</sub> (bar) at 20°C

---

8: Accumulator material

N - C-Stahl

R - Edelstahl (z. B. 1.4571)

T - Stahl für Temperaturen bis -40°C

R/N - Edelstahl / C-Stahl

---

9: Acceptance test - codes

CE Directive 2014/68/EU


---

Please for temperatures


about + 80°C consultation

### **Dimensions Diaphragm accumulator, welded construction**

Diaphragm not exchangeable!

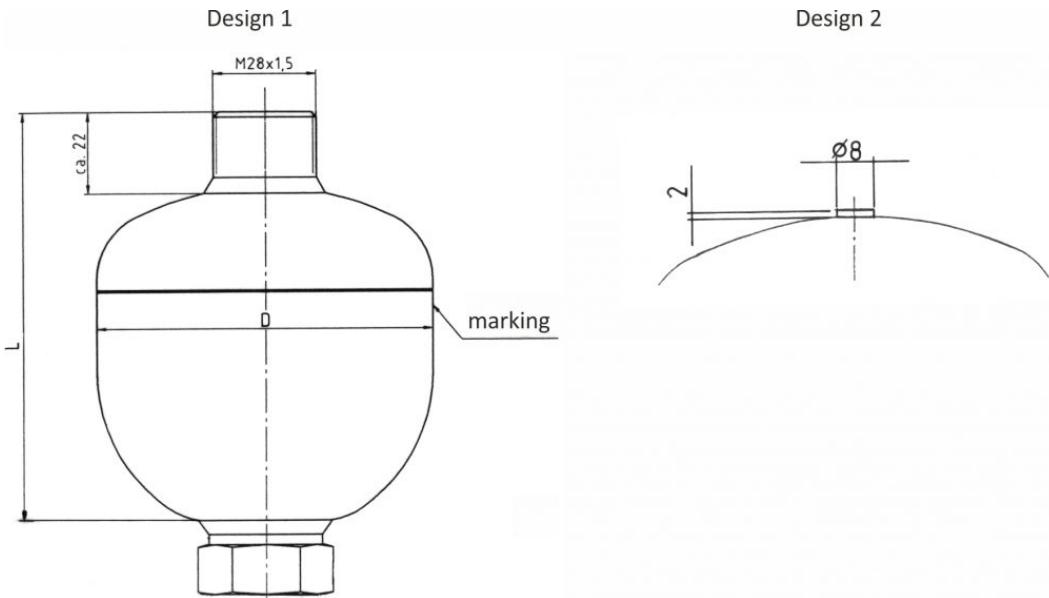

## Fluid supplies

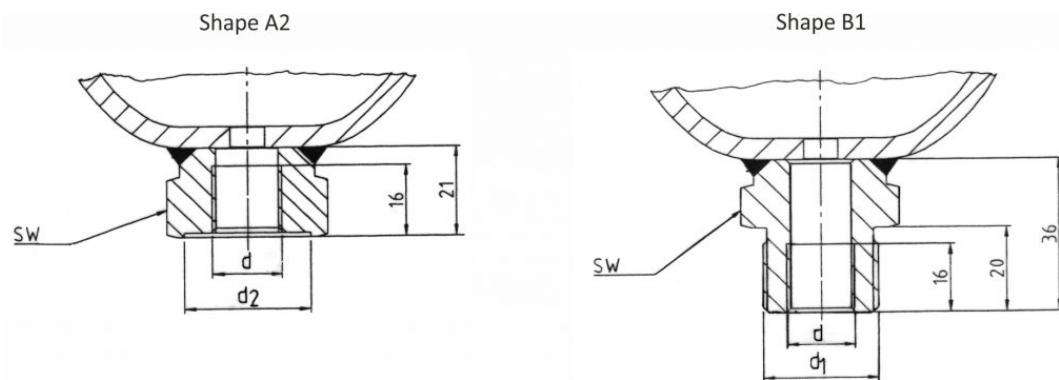

## Technical Data Diaphragm accumulator - standard steel

0,075 – 3,5 litres / 80 – 350 bar

Typ	nominal volume litres	operating pressure P (bar)	perm. pressure ratio P2 : P0	mass kg	volume flow Q (l/min)	volume			connection form			
						L mm	D mm	d1 mm	d Zoll	d2 mm	SW mm	
MS 0,075	0,075	250	8 : 1	0,7	35	90	64		G ½	29	32	A2
MS 0,16	0,16	250	8 : 1	0,9	35	101	74		G ½	29	32	A2
MS 0,25	0,25	210	8 : 1	1,1	35	107	84		G ½	29	32	A2
MS 0,32	0,32	210	8 : 1	1,3	80	116	93		G ½	29	32	A2
MS 0,32	0,32	330	8 : 1	1,6	80	118	95		G ½	29	32	A2

Typ	nominal volume litres	operating pressure P (bar)	perm. pressure ratio P2 : P0	mass kg	volume flow		d1 mm	d Zoll	d2 mm	SW mm	connection form	
					Q (l/min)	L mm						
MS 0,50	0,5	210	8 : 1	1,8	80	128	105	M33x1,5	G ½	29	41	B1
MS 0,50	0,5	330	8 : 1	2,4	80	136	110	M33x1,5	G ½	34	41	B1
MS 0,60	0,6	330	4 : 1	2,7	80	148	110	M33x1,5	G ½	34	41	B1
MS 0,75	0,75	150	8 : 1	2,1	80	140	117	M33x1,5	G ½	34	41	B1
MS 0,75	0,75	210	8 : 1	2,8	80	144	121	M33x1,5	G ½	34	41	B1
MS 0,75	0,75	330	8 : 1	3,5	80	148	125	M33x1,5	G ½	34	41	B1
MS 1,00	1,0	210	8 : 1	3,6	80	155	136	M33x1,5	G ½	34	41	B1
MS 1,00	1,0	250	8 : 1	3,6	80	155	136	M33x1,5	G ½	34	41	B1
MS 1,00	1,0	330	4 : 1	4,2	80	175	125	M33x1,5	G ½	34	41	B1
MS 1,40	1,4	140	8 : 1	5,2	80	178	150	M33x1,5	G ½	34	41	B1
MS 1,40	1,4	210	8 : 1	5,2	80	178	150	M33x1,5	G ½	34	41	B1
MS 1,40	1,4	250	8 : 1	5,2	80	178	150	M33x1,5	G ½	34	41	B1
MS 1,40	1,4	350	8 : 1	7,5	80	176	156	M33x1,5	G ½	34	41	B1
MS 2,00	2,0	100	8 : 1	5,5	140	192	163	M33x1,5	G ½	34	41	B1
MS 2,00	2,0	210	8 : 1	6,6	140	196	166	M33x1,5	G ½	34	41	B1
MS 2,00	2,0	250	8 : 1	7,5	140	200	170	M33x1,5	G ½	34	41	B1
MS 2,20	2,0	80	8 : 1	5,7	140	208	163	M33x1,5	G ½	34	41	B1

Typ	nominal volume litres	operating pressure P (bar)	perm. pressure ratio P2 : P0	mass kg	volume flow		d1 mm	d Zoll	d2 mm	SW mm	connec- tion form	
					Q (l/min)	L mm						
MS 2,80	2,8	210	4 : 1	8,2	140	248	166	M33x1,5	G ½	34	41	B1
MS 2,80	2,8	250	4 : 1	10,0	140	248	170	M45x1,5	G ¾	44	46	B1
MS 2,80	2,8	350	4 : 1	16,8	140	258	180	M45x1,5	G ¾	44	46	B1
MS 3,50	3,5	250	4 : 1	11,6	140	285	170	M45x1,5	G ¾	44	46	B1
MS 3,50	3,5	350	4 : 1	18,0	140	295	180	M45x1,5	G ¾	44	46	B1

### TEchnical Data Diaphragm accumulator - stainless steel

0,16 – 4,0 litres / 100 – 180 bar

Typ	nominal volume ltr.	operating pressure P (bar)	perm. pressure ratio P2 : P0	mass kg	volume flow		d1 mm	d Zoll	d2 mm	SW mm	connec- tion form	
					Q (l/min)	L mm						
MS 0,16	0,16	180	8 : 1	0,9	35	101	74		G ½	29	32	A2
MS 0,25	0,25	160	8 : 1	1,1	35	107	84		G ½	29	32	A2
MS 0,32	0,32	160	8 : 1	1,3	80	116	93		G ½	29	32	A2
MS 0,50	0,5	150	8 : 1	1,7	80	130	105	M33x1,5	G ½	29	41	B1
MS 0,75	0,75	140	8 : 1	2,8	80	145	121	M33x1,5	G ½	34	41	B1
MS 1,00	1,0	150	8 : 1	3,6	80	171	121	M33x1,5	G ½	34	41	B1
MS 1,40	1,4	150	8 : 1	5,2	80	178	150	M33x1,5	G ½	34	41	B1
MS 2,00	2,0	100	8 : 1	5,5	140	192	163	M33x1,5	G ½	34	41	B1
MS 2,80	2,8	100	4 : 1	6,0	140	244	163	M33x1,5	G ½	34	41	B1

Typ	nominal volume ltr.	operating pressure P (bar)	perm. pressure ratio P2 : P0	volume flow		L mm	D mm	d1 mm	d Zoll	d2 mm	SW mm	connection form
				mass kg	Q (l/min)							
MS 4,0	4,0	100	4 : 1	7,5	140	377	163	M45x1,5	G 1/2	46	46	B1
	4,00											

## Characteristics

*Installation position:* as desired

*Permissible operating temperature:* -10°C bis +80°C (other temperatures on request)

*Charging gas:* Use nitrogen only! Oxygen or compressed air means danger of explosion!

*Fluids:* hydraulic oil (other fluids on request)

## Instructions for mounting, maintenance and repair

According to the provided operating conditions the diaphragm accumulators should be charged at the charging pressure required in the place of installation.

### **When charging gas use nitrogen only! Oxygen means danger of explosion.**

The diaphragm accumulators can be screwed directly on the piping. When using a fluid connection with external thread, the accumulator can be fastened in threaded holes. In case of strong vibrations the accumulator should be protected against loosening. For this we recommend the HST-clamp straps. In the vicinity of the diaphragm accumulator a discharge and shut-off valve and a safetyvalve against excess pressure have to be provided in the hydraulic system. The maintenance of the accumulator is limited to the control of the gas pressure necessary for the respective function. Furthermore, we recommend to check the tight fit of the fastening of the accumulator and the pipe connections. Repair and restoring work of the accumulator are strictly prohibited, neither mechanical machining nor welding, soldering or other heat treatment.